

Assembly Instructions

Fanfare Rectangular Adjustable Table

May 2002

www.unicor.gov
800.827.3168

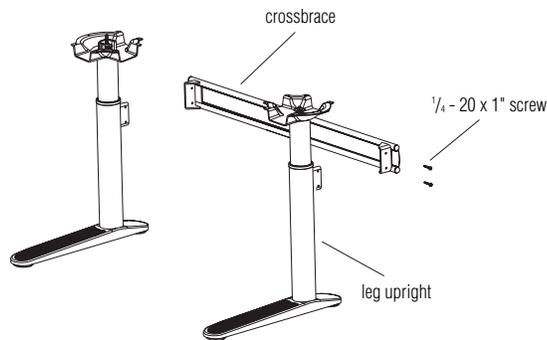


Figure 1

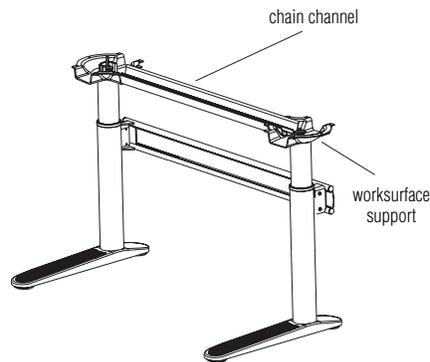


Figure 2



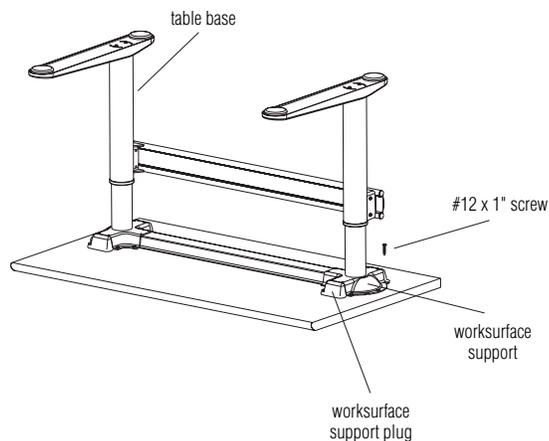


Figure 3

HARDWARE

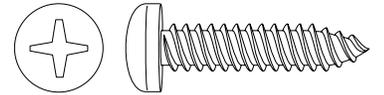

#12 x 1" Screw

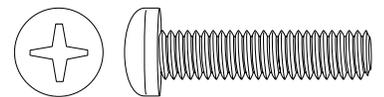

1/4-20 x 1" Screw

1. Remove base from packaging material.
2. With one leg upright supported, move legs apart to attach crossbrace (Figure 1).
3. Attach the crossbrace to the leg uprights with four 1/4-20 x 1" screws (Figure 1).
4. Slide the chain channel into the opening in each work surface support (Figure 2).
5. Remove the plastic sprockets by pulling out the cotter pins and sliding the sprockets over the hex shaft. Engage the sprockets into the chain. Reinstall the sprockets. Insert the cotter pins and separate the ends to secure.
6. Place the work surface upside down on a clean, soft surface to prevent scratching. Invert the table base on the work surface, taking care to align the holes with the pre-drilled holes in the work surface. Secure the table bases to work surface with fourteen #12 x 1" screws. Tap in four work surface support plugs (Figure 3).

Fanfare Rectangular Adjustable Table Base - Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and injury.

7. Carefully turn worksurface/base assembly upright and adjust worksurface to desired height with hand crank (Figure 4).

8. The four glides on the table base feet may be adjusted to accommodate varying floor surfaces. Lift the base off the floor and turn the glide clockwise or counter clockwise to adjust.

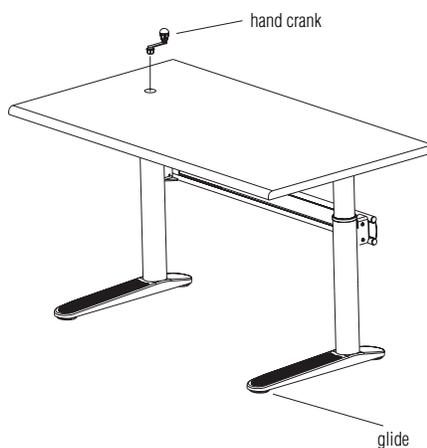


Figure 4